


GROMMET BUMPERS

STYLE 1

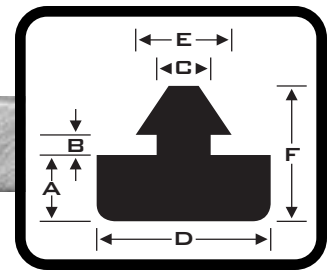

A BUMPER HEIGHT	B GROOVE WIDTH	C GROOVE DIAMETER	D OUTSIDE DIAMETER	E HEAD DIAMETER	F TOTAL HEIGHT	PART NUMBER
.062	.235	1/8	.475	.145	.342	MR 200-1309
1/16	1/32	3/16	5/8	7/32	9/32	MR 200-1310
1/16	3/64	15/64	17/32	19/64	17/64	MR 200-1311
1/16	3/64	9/32	1/2	3/8	17/64	MR 200-1312
1/16	1/16	1/4	1/2	1/2	19/64	MR 200-1313
1/16	1/16	9/32	9/16	3/8	1/4	MR 200-1314
1/16	.070	1/4	3/8	5/16	1/4	MR 200-1315
1/16	.090	1/4	3/8	5/16	17/64	MR 200-1316
5/64	1/16	3/16	5/16	1/4	1/4	MR 200-1317*
3/32	.040	3/8	5/8	29/64	1/4	MR 200-1318
3/32	3/64	1/4	3/8	5/16	1/4	MR 200-1319
3/32	3/64	1/4	7/16	5/16	17/64	MR 200-1320
3/32	1/16	5/32	3/8	1/4	17/64	MR 200-1321
3/32	3/32	17/64	3/8	21/64	3/8	MR 200-1322*
.100	.060	.120	7/32	.156	.210	MR 200-1323
7/64	3/64	15/64	17/32	19/64	5/16	MR 200-1324
7/64	3/64	1/4	1/2	3/8	19/64	MR 200-1325*
7/64	.070	.480	3/4	37/64	9/16	MR 200-1326
1/8	.040	15/64	5/8	5/16	1 1/32	MR 200-1327
1/8	.046	1/4	.437	.312	.296	MR 200-1328
1/8	.047	.531	7/8	1 1/16	1/2	MR 200-1329*
1/8	3/64	3/16	3/8	1/4	9/32	MR 200-1330
1/8	3/64	1/4	3/8	9/32	13/32	MR 200-1331
1/8	3/64	1/4	1/2	5/16	5/16	MR 200-1332
1/8	3/64	9/32	1/2	3/8	21/64	MR 200-1333
1/8	3/64	5/16	5/8	7/16	5/16	MR 200-1334
1/8	.050	3/16	1/2	17/64	7/16	MR 200-1335*
1/8	.050	.480	3/4	9/16	1/2	MR 200-1336
1/8	1/16	3/16	3/8	1/4	5/16	MR 200-1337
1/8	1/16	3/16	1/2	1/4	3/8	MR 200-1338

* = INSERTING HOLE IN BASE AND STEM

† = SEE MOLDED PARTS OF IRREGULAR DESIGN SECTION


**SPECIAL DESIGN - INVERTED "D" DIMENSION, STEPPED "A" DIMENSION

WESTERN RUBBER & SUPPLY, INC.
PHONE 800.969.0998 FAX 877.441.9790 WWW.WESTERNRUBBER.COM



GROMMET BUMPERS

STYLE 1

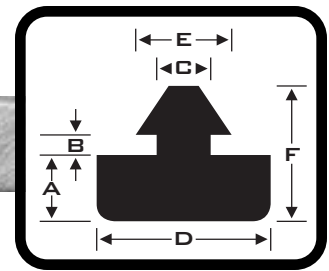

A BUMPER HEIGHT	B GROOVE WIDTH	C GROOVE DIAMETER	D OUTSIDE DIAMETER	E HEAD DIAMETER	F TOTAL HEIGHT	PART NUMBER
1/8	1/16	1/4	3/8	19/64	13/32	MR 200-1339
1/8	1/16	1/4	3/8	5/16	5/16	MR 200-1340
1/8	1/16	1/4	1/2	3/8	13/32	MR 200-1341
1/8	1/16	3/8	1/2	33/64	5/16	MR 200-1342
1/8	3/32	3/16	3/8	1/4	11/32	MR 200-1343
1/8	3/32	3/16	1/2	1/4	13/32	MR 200-1344
1/8	.100	.480	3/4	9/16	9/16	MR 200-1345
1/8	7/64	1 1/64	3/8	1/4	25/64	MR 200-1346*
1/8	1/4	1/4	1/2	25/64	1/2	MR 200-1347*
1/8	.281	.312	1-1/4	.406	.656	MR 200-1348
.150	1/16	1/4	1/2	.350	3/8	MR 200-1349
5/32	1/32	1/4	1/2	5/16	7/16	MR 200-1350*
5/32	1/16	1/4	3/8	5/16	11/32	MR 200-1351
5/32	1/16	1 1/32	9/16	27/64	5/16	MR 200-1352
5/32	5/64	.365	3/4	9/16	1 1/32	MR 200-1353
.156	.190	.170	.310	.218	.420	MR 200-1354*
3/16	1/32	1/4	1/2	5/16	7/16	MR 200-1355
3/16	1/32	17/64	3/8	1 1/32	3/8	MR 200-1356
3/16	3/64	1/4	7/16	5/16	23/64	MR 200-1357
3/16	3/64	9/32	1/2	3/8	25/64	MR 200-1358
3/16	.050	.480	3/4	37/64	9/16	MR 200-1359
3/16	1/16	3/16	1/2	1/4	7/16	MR 200-1360
3/16	1/16	1/4	3/4	3/8	3/4	MR 200-1361
3/16	.070	.480	3/4	37/64	9/16	MR 200-1362
3/16	5/64	9/32	1/2	3/8	27/64	MR 200-1363
3/16	1/8	1 1/32	3/4	15/32	7/16	MR 200-1364
7/32	1/32	9/32	15/32	3/8	1/2	MR 200-1365*
7/32	1/16	15/64	3/8	19/64	15/32	MR 200-1366
7/32	1/16	1/4	3/8	5/16	13/32	MR 200-1367
15/64	1/32	1/4	1/2	23/64	37/64	MR 200-1368

* = INSERTING HOLE IN BASE AND STEM

† = SEE MOLDED PARTS OF IRREGULAR DESIGN SECTION

**SPECIAL DESIGN - INVERTED "D" DIMENSION, STEPPED "A" DIMENSION




WESTERN RUBBER & SUPPLY, INC.

PHONE 800.969.0998 FAX 877.441.9790 WWW.WESTERNRUBBER.COM

GROMMET BUMPERS

STYLE 1

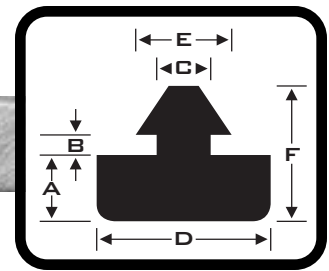

A BUMPER HEIGHT	B GROOVE WIDTH	C GROOVE DIAMETER	D OUTSIDE DIAMETER	E HEAD DIAMETER	F TOTAL HEIGHT	PART NUMBER
1/4	.025	3/16	5/8	1/4	15/32	MR 200-1369
1/4	1/32	5/32	3/8	7/32	7/16	MR 200-1370
1/4	.040	16/64	5/8	5/16	15/32	MR 200-1371
1/4	3/64	9/32	1/2	13/32	27/64	MR 200-1372
1/4	3/64	5/16	5/8	25/64	15/32	MR 200-1373
1/4	1/16	1/4	5/8	11/32	7/16	MR 200-1374*
1/4	5/64	1/4	1/2	11/32	53/64	MR 200-1375
1/4	5/64	5/16	7/8	13/32	1/2	MR 200-1376
1/4	9/32	5/16	7/8	13/32	45/64	MR 200-1377
.271	1/8	.255	.510	.351	.635	MR 200-1378
19/64	1/16	1/4	1/2	5/16	7/16	MR 200-1388
5/16	1/32	5/16	7/16	13/32	5/8	MR 200-1389
5/16	1/16	13/64	1/2	1/4	9/16	MR 200-1390
5/16	9/64	1/4	1/2	5/16	9/16	MR 200-1391
23/64	1/32	1/4	9/16	19/64	21/32	MR 200-1392*
3/8	1/32	1/4	9/16	11/32	11/16	MR 200-1393*
3/8	3/64	1/4	9/16	11/32	11/16	MR 200-1394
3/8	1/16	13/64	1/2	1/4	.600	MR 200-1395
3/8	1/8	15/64	5/8	5/16	3/4	MR 200-1396
.380	.080	.230	5/8	.300	.710	MR 200-1397
1/2	1/32	17/64	3/8	11/32	.696	MR 200-1398
1/2	1/16	1/4	3/8	11/32	23/32	MR 200-1399
1/2	1/8	3/8	1	1/2	1	MR 200-1400*
9/16	1/16	1/4	1/2	23/64	29/32	MR 200-1401
11/16	1/16	1/4	1/2	11/32	1-1/64	MR 200-1402

NEED IT FAST?

Give us a call, orders placed by 2:00 pm PST. are usually shipped the same day.

* = INSERTING HOLE IN BASE AND STEM

† = SEE MOLDED PARTS OF IRREGULAR DESIGN SECTION

**SPECIAL DESIGN - INVERTED "D" DIMENSION, STEPPED "A" DIMENSION

WESTERN RUBBER & SUPPLY, INC.

PHONE 800.969.0998


FAX 877.441.9790

WWW.WESTERNRUBBER.COM

WRS 17

GROMMET BUMPERS

STYLE 2

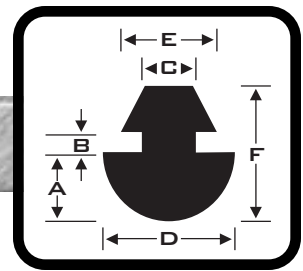

A BUMPER HEIGHT	B GROOVE WIDTH	C GROOVE DIAMETER	D OUTSIDE DIAMETER	E HEAD DIAMETER	F TOTAL HEIGHT	PART NUMBER
.048	.070	.062	.200	.100	.165	MR 200-1403
.077	1/32	1/8	1/4	3/16	9/64	MR 200-1404
.093	3/32	1/8	1/4	.187	3/8	MR 200-1405
3/32	3/64	15/64	7/16	19/64	19/64	MR 200-1406
7/64	1/16	3/16	5/16	15/64	15/32	MR 200-1407
1/8	1/32	3/16	3/8	1/4	3/8	MR 200-1408
1/8	3/64	3/16	3/8	17/64	7/16	MR 200-1409*
1/8	3/64	15/64	7/16	9/32	21/64	MR 200-1410
1/8	1/16	.090	1/2	11/32	1/2	MR 200-1411*
1/8	1/16	5/32	3/8	1/4	1/4	MR 200-1412
1/8	1/16	1/4	7/16	5/16	11/32	MR 200-1413
9/64	1/16	7/32	7/16	9/32	11/32	MR 200-1414*
.150	.030	1/4	13/16	.312	.312	MR 200-1415
5/32	1/32	3/16	5/16	1/4	9/16	MR 200-1416
5/32	1/16	1/4	13/16	5/16	11/32	MR 200-1417
3/16	1/32	3/16	5/16	1/4	19/32	MR 200-1418*
3/16	1/32	3/16	3/8	1/4	15/32	MR 200-1419*
3/16	1/16	3/16	3/8	1/4	1/2	MR 200-1420*
3/16	1/16	1/4	1/2	5/16	7/16	MR 200-1421
3/16	.100	1/4	1/2	5/16	15/32	MR 200-1422
15/64	1/32	1/4	1/2	11/32	25/64	MR 200-1423
3/8	.045	.320	3/4	1/2	21/32	MR 200-1424
3/8	1/8	1/4	1/2	3/8	15/16	MR 200-1425
1 1/16	1/8	1/4	1/2	3/8	1-1/4	MR 200-1426

* = INSERTING HOLE IN BASE AND STEM

† = SEE MOLDED PARTS OF IRREGULAR DESIGN SECTION

**SPECIAL DESIGN - INVERTED "D" DIMENSION, STEPPED "A" DIMENSION




WESTERN RUBBER & SUPPLY, INC.

PHONE 800.969.0998 FAX 877.441.9790 WWW.WESTERNRUBBER.COM

GROMMET BUMPERS


STYLE 3

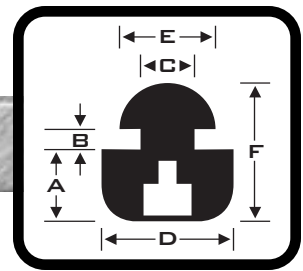

A BUMPER HEIGHT	B GROOVE WIDTH	C GROOVE DIAMETER	D OUTSIDE DIAMETER	E HEAD DIAMETER	F TOTAL HEIGHT	PART NUMBER
5/32	.040	3/16	3/8	17/64	17/64	MR 200-1427
3/16	1/16	3/16	3/8	17/64	3/8	MR 200-1428
3/16	1/8	3/16	3/8	17/64	7/16	MR 200-1429
.190	.055	.188	.380	.270	.430	MR 200-1430*
1/4	.040	1/4	1/2	11/32	7/16	MR 200-1431
1/4	1/16	1/4	1/2	11/32	7/16	MR 200-1432
1/4	1/8	1/4	1/2	11/32	1/2	MR 200-1433
5/16	.040	3/8	5/8	15/32	9/16	MR 200-1434
5/16	1/16	3/8	5/8	15/32	9/16	MR 200-1435

GROMMET BUMPERS

STYLE 4

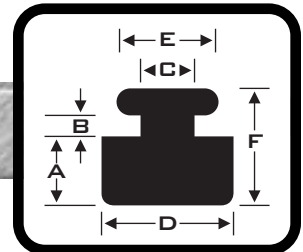

A BUMPER HEIGHT	B GROOVE WIDTH	C GROOVE DIAMETER	D OUTSIDE DIAMETER	E HEAD DIAMETER	F TOTAL HEIGHT	PART NUMBER
1/16	1/32	1/4	3/8	5/16	3/16	MR 200-1436
1/16	1/16	1/4	3/8	5/16	3/16	MR 200-1437
1/16	1/16	1/4	3/8	5/16	7/32	MR 200-1438
5/64	1/16	1/4	3/8	5/16	7/32	MR 200-1439
1/8	1/32	1/4	3/8	5/16	1/4	MR 200-1440
1/8	.032	1/4	3/8	.312	1/4	MR 200-1441
1/8	1/16	1/4	3/8	3/8	1/4	MR 200-1442
1/8	3/32	13/32	5/8	17/32	9/32	MR 200-1443
1/8	1/8	1/4	3/8	5/16	5/16	MR 200-1444
3/16	3/64	1/4	3/8	11/32	9/32	MR 200-1445
3/16	1/16	1/4	3/8	5/16	19/64	MR 200-1446

* = INSERTING HOLE IN BASE AND STEM

† = SEE MOLDED PARTS OF IRREGULAR DESIGN SECTION

**SPECIAL DESIGN - INVERTED "D" DIMENSION, STEPPED "A" DIMENSION

WESTERN RUBBER & SUPPLY, INC.

PHONE 800.969.0998


FAX 877.441.9790

WWW.WESTERNRUBBER.COM

WRS 19

GROMMET BUMPERS

STYLE 5

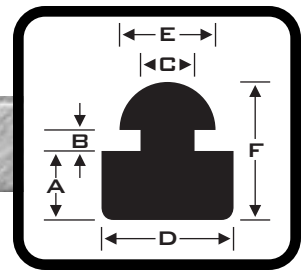

A BUMPER HEIGHT	B GROOVE WIDTH	C GROOVE DIAMETER	D OUTSIDE DIAMETER	E HEAD DIAMETER	F TOTAL HEIGHT	PART NUMBER
.031	.094	1/8	.234	.218	.165	MR 200-1447
3/64	1/32	1/8	5/16	3/16	3/16	MR 200-1448
1/16	1/16	1/8	5/16	3/16	7/32	MR 200-1449
3/32	5/64	3/16	7/16	1/4	17/64	MR 200-1450
1/8	1/32	1/8	5/16	3/16	9/32	MR 200-0151
1/8	5/64	9/32	9/16	3/8	23/64	MR 200-1451
1/8	1/8	1/4	1/2	5/16	11/32	MR 200-1452
1/8	1/8	1/4	17/32	11/32	13/32	MR 200-1453
5/32	1/16	3/16	1/2	1/4	13/32	MR 200-1454
5/32	1/16	1/4	1/2	5/16	11/32	MR 200-0427
3/16	1/16	3/16	1/2	1/4	3/8	MR 200-1455
3/16	1/8	1/4	7/16	5/16	7/16	MR 200-1456
13/64	1/32	3/16	3/8	1/4	21/64	MR 200-1457
1/4	1/16	1/4	1/2	5/16	7/16	MR 200-1458
5/16	3/16	1/2	1	11/16	11/16	MR 200-1459
.313	.093	1/4	1/2	3/8	.581	MR 200-1460
11/32	1/8	9/32	5/8	7/16	41/64	MR 200-0416
1/2	1/32	1/4	7/16	11/32	21/32	MR 200-1461

CAN'T FIND THE PART YOU'RE LOOKING FOR?

Please call us at 1-800-969-0998. We'll make every effort to find the part that matches your exact specifications.

* = INSERTING HOLE IN BASE AND STEM

† = SEE MOLDED PARTS OF IRREGULAR DESIGN SECTION

**SPECIAL DESIGN - INVERTED "D" DIMENSION, STEPPED "A" DIMENSION




WESTERN RUBBER & SUPPLY, INC.

PHONE 800.969.0998 FAX 877.441.9790 WWW.WESTERNRUBBER.COM

GROMMET BUMPERS

STYLE 6

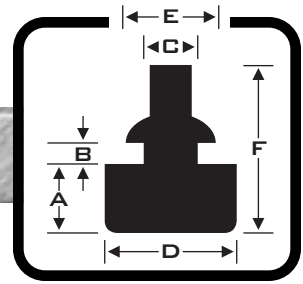

A BUMPER HEIGHT	B GROOVE WIDTH	C GROOVE DIAMETER	D OUTSIDE DIAMETER	E HEAD DIAMETER	F TOTAL HEIGHT	PART NUMBER
.059	.040	.169	.378	.228	1/2	MR 200-1462
.077	.032	1/8	1/4	3/16	.277	MR 200-1463
3/32	.040	1/8	1/4	7/32	15/32	MR 200-1464
1/8	.050	.170	.380	.270	.720	MR 200-1465
9/64	1/16	1/4	9/16	3/8	9/16	MR 200-1466
.156	1/8	1/4	1/2	11/32	1-1/8	MR 200-1467
5/32	1/32	11/64	1/2	1/4	5/8	MR 200-1468
5/32	1/32	1/4	1/2	5/16	1/2	MR 200-1469
5/32	3/64	19/64	5/8	3/8	1-1/16	MR 200-1470
5/32	3/32	1/4	1/2	5/16	17/32	MR 200-1471
5/32	1/8	1/4	1/2	11/32	1-1/8	MR 200-1472
5/32	1/8	19/64	5/8	3/8	1-1/8	MR 200-1473
11/64	1/16	9/64	5/16	1/4	13/32	MR 200-1474*
11/64	1/8	7/32	7/8	11/32	25/32	MR 200-1475*
.175	.207	.234	.893	.351	.895	MR 200-1476
.185	.050	.296	5/8	.380	1.111	MR 200-1477
3/16	3/64	1/8	1/4	7/32	9/16	MR 200-1478
3/16	3/64	13/64	3/8	17/64	11/16	MR 200-1479
3/16	.050	3/16	3/8	9/32	11/16	MR 200-1480
3/16	1/16	1/4	15/32	5/16	.780	MR 200-1481
13/64	.038	15/64	7/16	5/16	57/64	MR 200-1482
.218	.187	.218	5/8	.312	7/8	MR 200-1483
1/4	3/64	1/4	15/32	3/8	27/32	MR 200-1484
1/4	.060	.113	7/32	3/16	.447	MR 200-1485
1/4	1/8	1/4	1/2	3/8	13/16	MR 200-1486

* = INSERTING HOLE IN BASE AND STEM

† = SEE MOLDED PARTS OF IRREGULAR DESIGN SECTION

**SPECIAL DESIGN - INVERTED "D" DIMENSION, STEPPED "A" DIMENSION

WESTERN RUBBER & SUPPLY, INC.

PHONE 800.969.0998


FAX 877.441.9790

WWW.WESTERNRUBBER.COM



GROMMET BUMPERS


STYLE 6

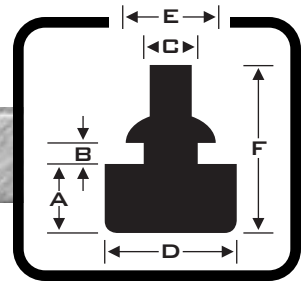

A BUMPER HEIGHT	B GROOVE WIDTH	C GROOVE DIAMETER	D OUTSIDE DIAMETER	E HEAD DIAMETER	F TOTAL HEIGHT	PART NUMBER
.278	.045	1/8	.180	.180	.447	MR 200-1487
.281	.200	1/4	1/2	1/4	.938	MR 200-1488
9/32	.200	1/4	1/2	23/64	15/16	MR 200-1489
.310	.030	.140	.380	1/4	.640	MR 200-1490
5/16	.040	15/64	3/8	5/16	25/32	MR 200-1491
5/16	1/8	1/4	1/2	3/8	61/64	MR 200-1492
.360	.062	.230	.380	.312	.862	MR 200-1493
3/8	1/16	1/8	5/16	3/16	1 1/16	MR 200-1494
13/32	5/64	1/4	7/8	13/32	1-1/32	MR 200-1495
1/2	1/16	.420	1	9/16	1.60	MR 200-1496
9/16	.109	.240	1/2	.380	1.137	MR 200-1497

GROMMET BUMPERS

STYLE 7

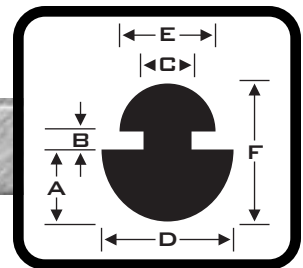

A BUMPER HEIGHT	B GROOVE WIDTH	C GROOVE DIAMETER	D OUTSIDE DIAMETER	E HEAD DIAMETER	F TOTAL HEIGHT	PART NUMBER
5/32	1/16	1/4	1/2	5/16	1 1/32	MR 200-1498
3/16	1/8	5/32	5/16	.230	13/32	MR 200-1499*
3/16	1/8	1/2	1	5/8	7/16	MR 200-1500
.281	1/8	1/2	1	5/8	.537	MR 200-1501

* = INSERTING HOLE IN BASE AND STEM

† = SEE MOLDED PARTS OF IRREGULAR DESIGN SECTION

**SPECIAL DESIGN - INVERTED "D" DIMENSION, STEPPED "A" DIMENSION




WESTERN RUBBER & SUPPLY, INC.

PHONE 800.969.0998 FAX 877.441.9790 WWW.WESTERNRUBBER.COM

GROMMET BUMPERS


STYLE 8

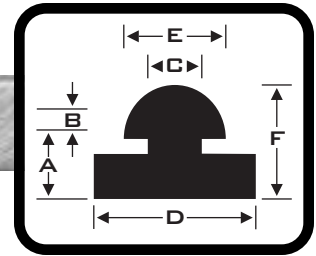

A BUMPER HEIGHT	B GROOVE WIDTH	C GROOVE DIAMETER	D OUTSIDE DIAMETER	E HEAD DIAMETER	F TOTAL HEIGHT	PART NUMBER
3/32	1/16	5/32	3/8	7/32	17/64	MR 200-0385
1/8	5/64	9/32	9/16	3/8	23/64	MR 200-0363
1/8	1/8	1/4	1/2	5/16	7/16	MR 200-0248
5/32	1/32	1/4	3/8	5/16	5/16	MR 200-0754
5/32	1/16	11/32	9/16	13/32	5/16	MR 200-0250
1/4	1/16	1/4	1/2	5/16	7/16	MR 200-0248
5/16	3/16	1/2	1	11/16	1 1/16	MR 200-0512

GROMMET BUMPERS

STYLE 9

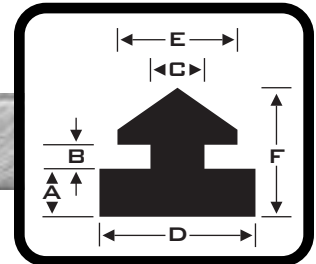

A BUMPER HEIGHT	B GROOVE WIDTH	C GROOVE DIAMETER	D OUTSIDE DIAMETER	E HEAD DIAMETER	F TOTAL HEIGHT	PART NUMBER
1/16	7/64	5/32	1/2	1/4	1/4	MR 200-0460
3/32	3/64	1/4	7/16	5/16	17/64	MR 200-0245
1/8	3/64	3/16	5/16	1/4	17/64	MR 200-0266
3/16	3/64	1/4	7/16	5/16	23/64	MR 200-0255
1/4	3/32	5/16	5/8	3/8	15/32	MR 200-0262

NEED IT FAST?

Give us a call, orders placed by 2:00 pm PST. are usually shipped the same day. We specialize in "Just In Time" delivery, and can comply with your special packaging or kit requirements.

* = INSERTING HOLE IN BASE AND STEM

† = SEE MOLDED PARTS OF IRREGULAR DESIGN SECTION

**SPECIAL DESIGN - INVERTED "D" DIMENSION, STEPPED "A" DIMENSION

WESTERN RUBBER & SUPPLY, INC.

PHONE 800.969.0998

FAX 877.441.9790

WWW.WESTERNRUBBER.COM



GROMMET BUMPERS

UNIQUE STYLES

